Installation and Programming of SK-983A HC Security Keypad (HouseControl M and L models)

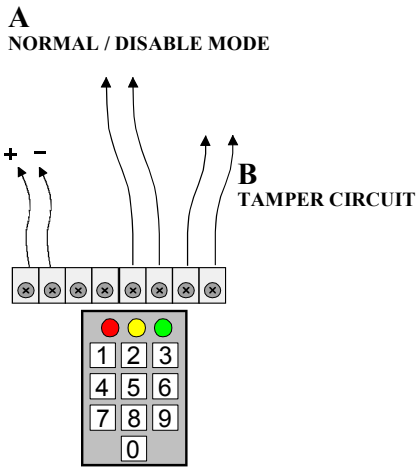

Connect the wires from the relay **A** to input IN1 in HouseControl. Adjust the input settings as described in the TeleControl User's Manual:
#I1 13 1 1 30

Connect the tamper circuit wiring **B** to input IN5 in HouseControl.

Wiring diagram for the signal lights can be found from the separate installation sheet.

	Task		*Explanation*
1.	Enter:	***0 0 0 0 ****	Enter programming mode using the factory-set Master Code.
	You will hear two short beeps		If you have used DAP jumper to override the Master Code, you can skip this step and go directly to step 2.
2.	Enter:	***0 x x x x #***	Set new personal Master Code. The leading zero indicates that the Master Code is changed. (x = any number).
	You will hear two short beeps		
3.	Enter:	***1 y y y y #***	Set the new User Code that will be used for switching HouseControl to normal or disable mode. Number one at the beginning refers to the User Code. (y = any number).
	You will hear two short beeps		
4.	Enter:	***4 0 1 #***	Set the relay output to momentary mode with one second output. The relay releases or pulls when the User Code is entered.
	You will hear two short beeps		
5.	Enter:	***7 0 #***	Set the keypad to lock itself for 30 seconds after 10 consecutive incorrect code entries.
	You will hear two short beeps		
6.	Enter:	*****	Exit programming mode and save changes.
	You will hear two short beeps		

The keypad is now ready and the relay can be pulsed with the User Code ***yyyy#*** .

Changing User Code

	Task	*Explanation*
1.	Enter: ***x x x x **** You will hear two short beeps	Enter the programming mode using your Master Code.
2.	Enter: ***1 z z z z #*** You will hear two short beeps	Set new User Code that will be used for switching HouseControl to normal or disable mode. (z = any number).
3.	Enter: ***** You will hear two short beeps	Exit programming mode.

The keypad is now ready and the relay can be pulsed with the User Code ***zzzz#*** .

The yellow signal light starts blinking as soon as the keypad is ready for use.
When monitoring is switched on, the red signal light blinks for 30 seconds after which it will stop blinking and remain on.
The red light is off in disable mode and only the yellow light blinks.

Wiring:

Consult the separate HouseControl wiring diagram.